


1

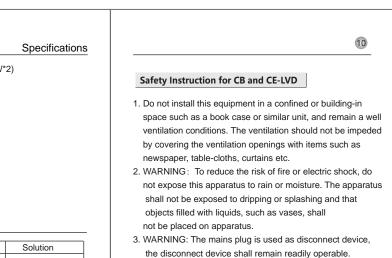

Source	
FD-SPK026	 Mark two bolt locations on the wall with 600mm interval at a level. Drill two holes on the marked locations. Insert two bolts into the rubber stopper, and leave 2mm outside for hanging the bracket

and be will appear in the display	Optic
 Please note: 1. the device most recently connected to the F&D System connects automatically when Bluetooth is activated and the input for Bluetooth playback has been selected. in this case the message be will appear. 2. Start the playback of a medium on your mobile end device and the sound will automatically be generated by the F&D System. USB mode 1. Plug in USB driver 2. Card reader supporting max 32GB as well as MP3/WMA dual formats decoding 3. Play music (refer to remote control function) 	Short 1. Co spe 2. Ple you etc 3. Adj Tips: Please functic
	1

Optical mode	;						
Short press Se 1. Connect TV speaker thi 2. Please mal your device etc. Below 3. Adjust volu Tips:	ource to se / with option rough option ke sure to es,such as as example me while p	set "PCM mode Blue-ray DVD, e. blaying music.	rear of the " as digital TV and Vio	deo player,			
Please make sure that TV supports HDMI(ARC) and optical function.							
function.				П			
Settin	g Display		.				
	Sound	analog audio output					
	Video	Digial audio output	PCM				
		Sound mode	AC-3				
			DTS				
			HDMI(ARC)				

Le

Sound reproduction poo soft Volume of F&D System set too low Using the Volume built on the source device F&D System does not respond to remote control. The battery is empty Replace battery, observe correct polarity at insertion Replace battery, observe correct polarity at insertion Replace battery, observe correct polarity at insertion No source device not producing any signal. Replace battery, observe correct polarity at insertion Digital output on the source device not producing any signal. Source device not activated (please refer to device instructions). Digital output on the source device on t rod device instructions). Source device not producing any signal. Check the connection of the source device to the F&D System and change the cable if necessary. Check the connection of the source device to the SAD system and change the cable if necessary. Check the connection of the source device to the speaker Source device	not turn on	to the power outlet and/or F&D System	Check connection	The second se
No sound reproduction The battery is empty District control. No sound reproduction Source device not producing any signal. Digital output on the source device not activated (please refer to device instructions). Digital output on the source device not activated (please refer to device instructions). uncontrolled waste disposal, recycle it responsibly to prom the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental of the source device to the F&D System and change the cable if necessary. distance is far from device in Bluetooth mode Put your Bluetooth device so the speaker Put your Bluetooth device to the speaker Bluetooth device not connected successfully please restart the speaker and try again please restart the speaker and try again No sound output optical cable not connect not bend optical cable not bend optical cable	Sound reproduction oo soft	volume of r up bystem	using the "Volume" button. increase the volume of the source	 Correct Disposal of this product. This marking indication that this product should not be disposed with other household wastes throughout the EU. To prevent possible
Source device not producing any signal. Digital output on the source device not activated (please refer to device instructions). your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling. No sound reproduction Cable not correctly connected/faulty cable. Check the connection of the source device to the F&D System and change the cable if necessary. Check the connection of the source device to the F&D System and change the cable if necessary. Source device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling. distance is far from device in Bluetooth mode put your Bluetooth device close to the speaker put your Bluetooth device close to the speaker 5. Bluetooth device not connected successfully please restart the speaker and try again please restart the speaker and try again b. The Max. transmit power: 10 dBm	F&D System does not respond to remote control.	The battery is empty	observe correct polarity	uncontrolled waste disposal, recycle it responsibly to prom
No sound reproduction Cable not correctly connected/faulty cable. of the source device to the F&D System and change the cable if necessary. safe recycling. distance is far from device in Bluetooth mode put your Bluetooth device close to the speaker put your Bluetooth device to the speaker put your Bluetooth device to the speaker safe recycling. safe recycling. No sound output optical cable not connect put your Bluetooth speaker and try again please restart the speaker and try again safe recycling. safe recycling.			source device not activated (please refer	your used device, please use the return and collection
distance is far from device in Bluetooth mode put your Bluetooth device close to the speaker Bluetooth device not connected successfully please restart the speaker and try again			of the source device to the F&D System and change the cable if	safe recycling. 5.
No sound output optical cable not connect not bend optical cable		device in Bluetooth	device close to the	

SF80 WARRANTY CARD	WARRANTY TERMS & CONDITIONS	JESO WARRANTY CARD	WARRANTY TERMS & CONDITIONS
END-USER'S COPY WARRANTY REGISTRATION CERTIFICATE Mr./Mrs/Ms First Name: Last Name: Last Name: Address: Contact No.: Product Name: Model No.: Serial No.: Date Purchased: Invoice No.: Retail Outlet Where Purchased: (Please print the name & address)	 and returned to the company within 14 days from the date of purchase. We guarantee the provision of free services of <i>J</i> F82 product within the warranty period, from its date of purchase from our Authorised Dealer. The period and conditions of our warranty service are as follow: 1. The warranty covers services by our / F82 Authorised Dealer. This warranty card together with the receipt must be presented when servicing is required. This warranty card together with the receipt must be presented when services will be provided for defects arising from normal usage for the following period, commencing from the date of purchase from our / F82 Authorised Dealer. (Parts would be replaced when necessary) A. Parts:	DISTRIBUTOR'S COPY WARRANTY REGISTRATION CERTIFICATE Mr./Mrs/Ms First Name: Last Name: Address: Contact No.: Product Name: Model No.: Serial No.: Date Purchased: Invoice No.: Retail Outlet Where Purchased: (Please print the name & address)	 and returned to the company within 14 days from the date of purchase. We guarantee the provision of free services of <i>∠</i> recorrect within the warranty period, from its date of purchase for our Authorised Dealer. The period and conditions of our warrant service are as follow: 1. The warranty covers services by our <i>∠</i> recorrect and the service are as follow: 2. Repair services will be provided for defects arising from norm: usage for the following period, commencing from the date of purchase from our <i>∠</i> recorrect arising from norm: usage for the following period, commencing from the date of purchase from our <i>∠</i> recorrect arising from norm: usage for the following circumstances, service and parts will be chargeable even within the warranty period. A. Farts: 1 year 3. Under the following circumstances, service and parts will be chargeable even within the warranty period: A. Failure to present the warranty period: A. Failure to present the warranty card and receipt when servicing is required. For eg.: Alteration of the date of purchase, serial numbers-altered or removed. B. This unit being tampered with, altered in any way by any unauthorised technicians or which has been subjected to misuse negligence or accident. This guarantee does not cover damage occuring in transit by or from the customer. C. The defect is caused by the attack of household pests, fin lighting , natural disasters, pollution, abnormal voltage or the usa of generator.
SECTION 1	Shenzhen Fenda Technology Co., Ltd. Add : Fenda Hi-Tech Park,Zhoushi Road,Shiyan,Baoan,Shenzhen,China P.C. : 518108 Http://www.fenda.com	SECTION 2	Shenzhen Fenda Technology Co., Ltd. Add : Fenda Hi-Tech Park,Zhoushi Road,Shiyan,Baoan,Shenzhen,China P.C. : 518108 Http://www.fenda.com

[×	F82)奋达科技	时	间	20200806	订单	鱼 号	FE20131	外尺寸/套装数	75X154mm(成型),150X154mm(展开)
	品	牌	FD	公司	型号	HT-330	客户	型号	HT-330	材质/厚度	105g铜版纸
	版	本	A0	设计	内容	说明书	料	년	12.005.0004.04374	盒型/页码/条码	16P,书钉
	<u>电</u> 软	子件		结电	构	林全华	业	务		爆破/边压	/
	设 ì	+者	张志锋	标准	筆 化	李洪波	<u>项目</u> 产品	<u>经理</u> 经理	黄伟/肖贞钊	印刷/表面处理	单黑印刷
	备	注	此物料刀模	此物料刀模同前料号: 印刷颜色同:						工艺/单双泊/AB同版	/
	Ħ	<i>ν</i> Ξ	印刷颜色同:							公差/用量	公差±0.5mm 用量1